

Keypad Locks

Model FE595— Flex Lock


Locking and Unlocking

Keypad locks are always locked from the outside, by default. Only the FE595 can be set to unlocked.


To Temporarily Unlock

» If lighting is low, press the Schlage button to illuminate the keypad before beginning.

1 Enter a User Code into the keypad.

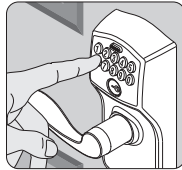


2 Rotate the lever to open the door. Door will automatically re-lock.

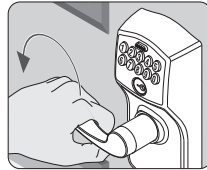

To Set to Unlocked

1 Rotate the inside thumbturn to the vertical position.*

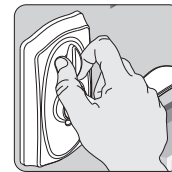

2 Rotate the thumbturn back to the horizontal position to re-lock.




* No User Code is required to open the door when the lock is set to unlocked.


Key Override (Maintenance Staff Only)

Key Override can be used when the battery is completely dead, or when no valid User Code is known.


1 Insert key.

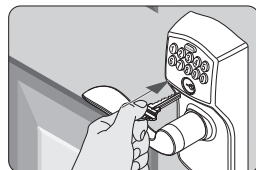

2 Rotate key 270° to unlock.

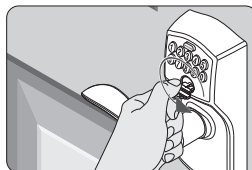

3 Rotate knob/lever to open door.*

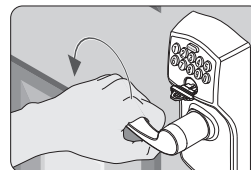


* Rotate the key back to starting position to relock. The key cannot be removed from the cylinder while the lock is unlocked. See Changing the Battery on page 7 or Restore Factory Settings on page 13 for more information.

Changing the Battery


» Replace the batteries in your lock at the same time each year that you test and replace the batteries in your smoke alarms. This will ensure continued reliable operation. Use a high-quality alkaline 9 volt battery for replacement.

FE595

1 Remove the inside cover.

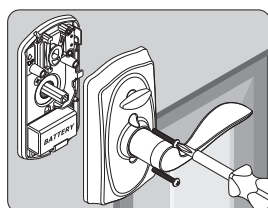

2 Replace the battery.

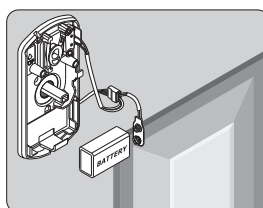

3 Replace the cover.

